

Translation from German document on <http://www.Pagodentreff.de> using Google Translate

### Ausbau der Sitze

Expansion of the seats

Driving seats to the front. If seat belts are mounted behind the seats, these are Remove. Mark or photograph the position of the seat rails on the seat supports.



Remove the two screws SW 10 from the seat rails. Drive seat to the very back. To Slightly fold the seat back forward so that the seat can really be pulled back completely. Well then remove both front screws from the seat rails. Lift seat out of the vehicle. trunk If necessary, protect the hood with a blanket beforehand.

### Fahrersitz zerlegen

Disassemble driver's seat

Remove the side chrome trim on the inside. At the bottom of the slots in the Gently pry the chrome trim over the two locking lugs.



The locking lugs sit on a plastic clip, which you can possibly replace. If new Brackets are available, the locking lugs can also be cut off to the chrome panels to protect. Lift off the chrome trim.



Unhook and remove the spring for driving the backrest adjustment. Attention, left and do not confuse right spring.

Also unlatch the chrome trim on the outside at the bottom.

Basically, the cover of the handwheel to seat back adjustment through two holes in the Handwheel can be pressed from behind. But that is not recommended, because the lid normally breaks and is no longer available. Therefore, better raise the chrome trim as far as possible and unhook the spring as on the inside. Push the rack away from the shaft.



Remove rear wall of backrest. Remove two chrome screws at the bottom and rear wall after pull down. Press the rear panel a bit and pull it out of the guide on the left or right.

The two retaining rings left and right of the shaft for the seat back adjustment with Press off the screwdriver. Pull the shaft out of the seat with the handwheel. Make sure that the Racks do not reach into the teeth of the shaft. Now you can also use the outer chrome trim be removed.

From the inside of the seat backrest, the flat counter nut SW 13 of the screw in the backrest bar on the left and to the right. Often these nuts are loose in the seat!



Loosen the screw in the backrest bar with a large screwdriver (nut) on both sides and rest lose weight. Unscrew backrest bar from both sides of the seat and use both backrests remove the seat lock



To dismantle the seat rails push them forward so far that the front hole over the Mounting screw comes. Unscrew both screws and remove rails.



### Zusammenbau

#### Assembly

The assembly takes place in reverse order. Rails and backrest bar with lock mount again to the seat.



Lean back on the backrest bar screw. Chrome cover behind the handwheel on the shaft for Slide the seat adjuster and push the shaft back through the backrest. That can be tedious because the backrest frame can be quite under tension with a new cover and the backrest is also stabilized by the wave of seat adjustment. Hook springs in again and Engage chrome panels on both sides.



As you can see on the cables, I now have a seat heater.